


CHO 5033

ASSEMBLY & INSTALLATION GUIDE

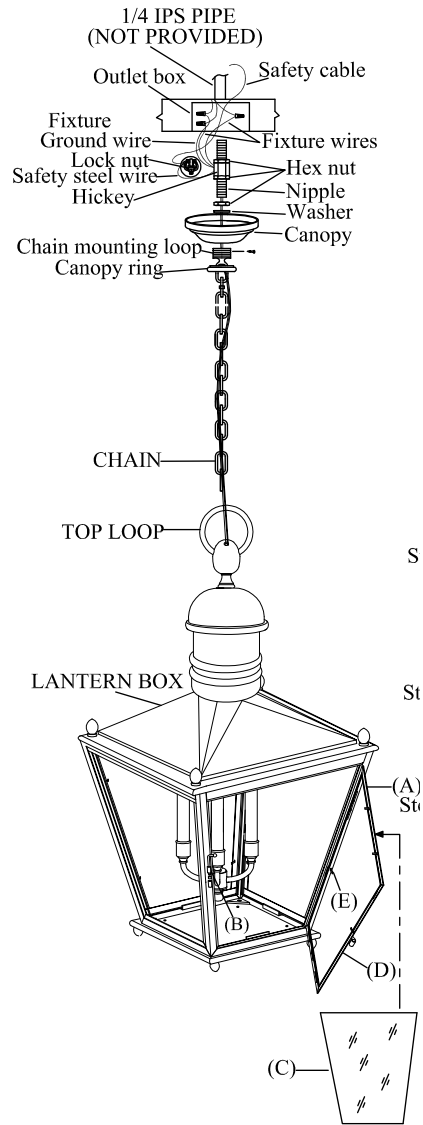

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

1. To insert glass panel (C) provided to front door (D), make sure metal tab (E) is flipped up. Place glass panel (C) to front frame, secure glass panel (C) by bending back metal tab (E) downwards. Insert other three glass panels into the other sides of the lantern box.
2. Attach chain to top loop on chandelier.
3. Feed wire through chain and mounting loop. Slide canopy on chain.
4. Insert top thread nipple in mounting 1/4 IPS pipe. Attach chain mounting loop to nipple.
5. Attach chain with fixture to chain mounting loop at desired height. Step 9 Connect the safety steel wire from the fixture and the safety cable from ceiling with lock nut.
6. Attach the bare copper ground wire from the fixture to the ground junction box wire (usually green or copper wire). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed. It is imperative that the outlet box in your home be properly grounded.
7. Connect the neutral wire from the fixture (ridged molded wire) to the neutral wire from the junction box (usually white). Fasten together with a plastic wire connector and wrap the connection with electrical tape. Be sure no wire strands are exposed.
8. Connect the hot wire from the fixture (smooth wire) to the hot wire (usually black) from the junction box. Fasten each together with a plastic wire connector and wrap the connection with electrical tape. Be sure that no wire strands are exposed. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OR SAFETY WILL BE COMPROMISED.**
9. Slip canopy to ceiling and secure with threaded canopy ring. Insert light bulbs into the sockets. Close front door (D) and secure by inserting plug (B).
10. INSTRUCTIONS FOR MOUNTING FIXTURE OUTDOORS AND/OR IN WET LOCATION: Mounting surface should be clean, dry, flat and 1/4" larger than canopy/fixture base all sides. Any gaps between the mounting surface and canopy exceeding 3/16" should be corrected as required.
11. With silicone (ex. GE-108) caulking compound, caulk completely around where back of canopy meets the wall surface to prevent water from seeping into outlet box.