

ASSEMBLY INSTRUCTIONS


Boswell Small Sconce Item # KS 2550

WE RECOMMEND INSTALLATION OF THIS LIGHTING FIXTURE BE DONE BY A LICENSED ELECTRICIAN.

WARNING * SWITCH OFF THE MAIN ELECTRICAL SUPPLY FROM THE MAIN FUSE BOX/CIRCUIT BREAKER BEFORE INSTALLATION.**

INSPECT ITEM CAREFULLY BEFORE ATTEMPTING TO INSTALL. IF THERE IS ANY DAMAGE OR OBVIOUS DEFECT, DO NOT INSTALL.

ITEM MAY NOT BE RETURNED ONCE IT HAS BEEN INSTALLED.

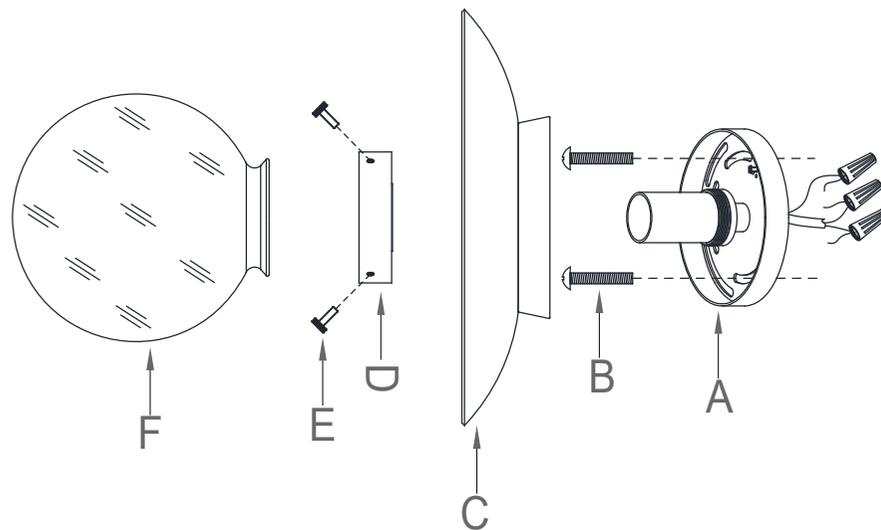

1. Carefully remove all parts from the carton.
2. Remove shade (C) from mounting plate (A) by removing threaded ring (D) in counter-clockwise direction.
3. Attach the fixture ground wire (green) to ground wire (usually green or copper in color) of the wall outlet box and fasten together with a plastic wire connector. Tightly wrap the wire connector with electrical tape so the end of the connector is sealed. **IT IS IMPERATIVE THAT THE OUTLET BOX IN YOUR HOME BE PROPERLY GROUNDED.**
4. Connect fixture neutral wire (white) to neutral wire (usually white) of wall outlet box. Fasten the wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape.
5. Connect fixture hot wire (black) to hot wire (usually black) of wall outlet box. Fasten the wires together with a plastic wire connector and tightly wrap the wire connector with electrical tape. Always make sure that no wire strands left outside the connectors. **DO NOT REVERSE THE HOT AND NEUTRAL CONNECTIONS OTHERWISE SAFETY WILL BE COMPROMISED.**
6. Affix mounting plate (A) to wall outlet box with mounting screws (B) provided.
7. Attach shade (C) to the mounting plate (A) and tighten with threaded ring (D).
8. Insert light bulb (not included) into socket.
9. Loosen thumbscrew screws (E) and carefully insert the glass shade (F) into the threaded ring (D) and tighten with thumbscrew screws (E). **DO NOT OVER-TIGHTEN THE THUMBSCREWS OTHERWISE THE GLASS WILL BE BROKEN.**

*** Clean with a dry, soft cloth only. Use no harsh abrasives or chemical agents.